





Cuckoo Clock (White/Grey)

# Instructions for Use

- Thank you for purchasing this product.
- Please read this sheet before use
- Please keep this sheet in a safe place for future reference.

Included	
AA size alkaline dry battery	(1)
Wall-mounting screw	(1)
Cushions	(4)
Instructions for Use (this sheet)	(1)

Instructions for Use serial number 4ZH617AZ-1 (Y1208)

## Safety advice

Please read and strictly follow these instructions.

Safety symbols

- ⊘ indicates prohibited (actions that must not be carried out).
- ⚠ indicates actions that must be carried out without fail.

⚠

Warning

Content carries the possibility of causing death or serious injury.

⚠

Compulsory

In order to prevent accidents caused by accidental ingestion, please do not put small parts or batteries within the reach of small children.

Should the product be swallowed please immediately seek medical treatment from a doctor.

⊘

Prohibited

In order to avoid battery liquid leakage, overheating, or bursting, following must be observed:

- Do not short circuit the battery.
- Do not recharge the battery.
- Do not damage or disassemble the battery,
- Do not heat the battery or put it in a flame.

⊘

If liquid is leaking from the battery do not touch it with bare hands.

- In the case that liquid leaking from the battery enters the eyes or touches the skin, immediately flush with water and please see a doctor for medical treatment. If it gets on your clothes, immediately rinse with water. Alkaline batteries can increase the risks of severe damages such as inflammation and blindness.
- Remove the battery with rubber gloves. Thoroughly wipe the liquid off using a cloth or paper.

## Concerning maintenance

- When the product is very dirty, wipe off a little at a time with a soft cloth wet with synthetic detergent diluted in water or soapy water and after that lightly wipe dry.
- Please do not use benzine, thinner, alcohol or any kind of spray cleaner to clean a soiled case, for example.
- When you have mounted the clock, please clean it regularly because the clock and the wall may become dirty due to static electricity.

## Disposal of clock batteries

- Please follow your local regulations.
- Please dispose of the clock and the battery separately.

WARNING! This product is covered by the Waste Electrical and Electronic Equipment (WEEE) directive. It should not be discarded with normal household waste but taken to your local collection centre for recycling.

⊘

CE

⚠

Batterien dürfen nicht in den Hausmüll!

Als Verbraucher sind Sie gesetzlich verpflichtet gebrauchte oder ausgelaufene Batterien zurückzugeben. Sie können Ihre alten Batterien bei den öffentlichen Sammelstellen, in Ihrer Stadt oder überall dort abgeben, wo Batterien der betreffenden Art verkauft werden, und speziell gekennzeichnete Sammelbehälter aufgestellt sind. Bei Verschrottung des Gerätes sind die Batterien zu entnehmen und müssen ebenfalls bei Sammelstellen abgegeben werden.

Hinweis: Diese Zeichen finden Sie auf schadstoffhaltigen Batterien:  
Pb Pb = Batterie enthält Blei  
Cd Cd = Batterie enthält Cadmium  
Hg Hg = Batterie enthält Quecksilber

⊘

The illustrations are for use as operating instructions and may differ from the actual product.

⚠

Caution

⊘

Do not touch the hour hand, minute hand or cuckoo. This can cause the time to be incorrect, damage or prohibited failure.

### How to handle the back cover

Back cover

Hole for sound from the bellows

① Removing

Lift the back cover up in the directions of black arrows, and then pull down the lower part towards you.

⑦ Attaching

Tilt the back cover. Insert the upper part of the cover in the directions of white arrows, and put lower part of the cover in the groove at the bottom.

Make sure that finger hole aligns properly with the bellows sound hole. Otherwise, chime's volume will be low.

② Turn the knob to set the hands in the direction of the arrow and set the time at 5:50.

12

9

6

3

Knob to set the hands

Cuckoo

When the clock chimes it pops out and goes up and down. When the cuckoo stays out and does not go back in press the test button to return it.

Test button (chime check)

Light sensor

It detects the amount of light and silences the chime in the dark.

Minute hand (long hand)

Hour hand (short hand)

③ Insert the battery.

AA size dry alkaline battery

④ Reset.

⑥ Chime switch

⑤ Knob to set the hands

\* Turn in the direction of the arrow. (Showing the operations in the back with the back cover removed)

Set

Hole for sound from the bellows

## Caution Changing the batteries

⚠

Compulsory

Repairing clocks and furniture due to battery fluid leakage may cost you a fortune. In order to avoid battery liquid leakage or bursting, following must be observed.

- If the clock stops and no sound comes from the chime, either replace the battery with a new one or remove the battery.
- Even when the clock is still working change the battery regularly once per year.



When you are changing the battery please refer to the “Steps for Use” to set the time and time signal .

- Types of battery
- Please do not use rechargeable batteries as generally the voltage is too low.
  - Dry manganese batteries have a shorter life compared to dry alkaline batteries
- Life of the battery
- The factory-loaded battery life may be shorter than the specification.
  - The life of the battery may be shorter than in the product specifications depending on the conditions of usage, such as temperature.
  - In the case of using batteries that are not used for a while after being purchased, the life of the battery may be shorter according to the storage conditions or the “recommended use by date” indicated on the dry battery.

## In the case of mounting on a wooden pillar or thick wooden wall surface

- The enclosed wooden screw for wall mounting is for wooden pillar and thick wooden wall.
- Screw the wall-mounting wooden screw firmly at a right angle into the surface of the wall and fasten.

Back of the clock

17mm

Wooden pillar or thick wooden wall

Mounting holes

Lodged (good example)

Not lodged (bad example)

## In the case of mounting the clock on other wall surfaces

- When mounting the clock on other wall surfaces, such as plasterboard walls or concrete, please use appropriate tools sold commercially that are suitable for the wall materials and structure and the weight of the clock. For this purpose, do not use sticky tape or suckers because there is the danger that the clock may fall down.

Make sure that you definitely follow these steps to correctly set the chime.

## 1 Steps for Use

- ① Remove the back cover.
- ② Turn the knob to set the hands in the direction of the arrow and set the time at 5:50.
- ③ Insert the battery after aligning it with the + and – marks in the holder. The chime will start when you insert the battery.
- ④ Press RESET.
  - In order to prevent malfunction always be sure to press this button after inserting the battery.
  - When you press RESET the chime is set for 5 o'clock.
  - It is possible to press this button even during the chime.
- ⑤ Turn the knob to set the hands in the direction of the arrow ONLY and set the present time.
  - It is possible to set the time even during the chime.
- ⑥ Set the chime switch.
  - ON The chime will ring OFF The chime will not ring \* When the product is shipped the chime is set for OFF
- ⑦ Attach the back cover.

\* The cuckoo calls 5 times directly after inserting the battery or when pressing the RESET button.  
\* In dark locations the chime will not ring in steps ③-⑤.  
\* When the chime switch is set for OFF the chime will not ring in step ⑤.  
\* The number of times the clock will chime can be increased once each time the minute hand passes the number 12 (0 minutes.) As it can be increased even if the hand is moved in an anti-clockwise direction, please be sure to turn the hand in a clockwise direction when setting the time.

## The chime function

⊘

Setting the chime switch

ON

On the hour : the number of times the cuckoo calls corresponds to the number of hours in the time.  
On the half-hour: the cuckoo calls once.  
\* Due to the light sensor the chime does not ring in dark locations.

OFF

The chime does not ring.

⊘

The half-hour chime

\* Even if the hands are set at the half hour as explained in ⑤ , the chime will not ring.  
\* When the hands were set, the half-hour chime may not ring on time. However, after the hour strikes, it will resume normal.

⊘

The volume of the chime

The volume cannot be adjusted but if you remove the back cover the volume will become louder. If you block the round hole in the back cover the sound of the chime will become quieter.

⊘

Confirmation and alteration of chime...TEST and SET buttons

If you press the TEST button then the chime will only ring for the number of times corresponding to the time displayed.  
For example, if the time is indicated at 10:09 then the chime will ring (the cuckoo will call) 10 times.

When the number of chimes is incorrect, Reset the SET button with the correct number of chimes.

○ If you press the SET button once, the number of chimes will increase by one.

○ When it reaches 12 times it will return to one time.

Or correct the clock by following the procedure in steps ①-⑦ above.


⌚

To correct the time if it is too fast or too slow.

Please turn the knob to set the hands in the direction of the arrow ONLY and set the correct time.

## 2 Installation of the clock

If the clock is in a tilted position the chime will not work properly. Please attach the cushions included with the product to the four places on the bottom of the clock (if it is to be used by placing on a surface) or to the four places on the back of the clock (if it is to be used by mounting.)

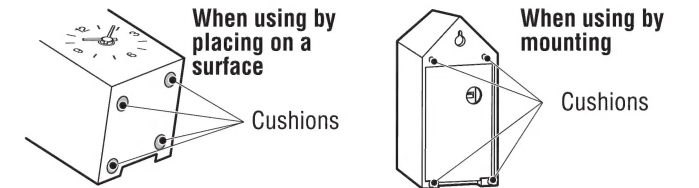

Placing on a surface

In order to prevent the clock from falling or coming off, please place it in a horizontal and steady place with little vibration.

Mounting

⚠

Caution

If the clock is not properly mounted, there is the danger that it will fall off.

- When you have mounted the clock, lightly move it up and down and to the right and left and check whether the mounting fitting (wooden mounting screw) is securely fitted into the wall mounting hole.
- Please mount it perpendicularly. If it is tilted there is the danger that it will come off the mounting fitting.
- Please install the clock in a location that is not affected by vibrations from doors opening and closing.
- If you use your own mounting hunger, please choose a product that can be securely fitted into wall mounting holes.